

Installation Specification Sheet

for Urban Arrow Carrier Rear Rack - 1st Generation
With Curved Top Rails -- pre 2020

schleptastic.com
support@schleptastic.com



← For Use with [this Video Guide](#)

TOW MONSTER
by *Schleptastic!*




Tools & Materials (Not Included)

- 8mm Deep Socket (Works Best if Available) or 8mm Wrench, or Adjustable Wrench
- 3mm Hex Keys / Allen Wrenches
- Adjustable Pliers
- Electrical Tape (sometimes needed, see video guide)
- Scissors (sometimes needed, see video guide)


Mounting Hardware Parts List

- | | |
|-------------------------------|-------------------|
| 5 x P-Clamp 1/2" | 10 x Large Washer |
| 1 x Screw: M5 x 45mm | 1 x Spacer: 5mm |
| 1 x Screw: M5 x 50mm | 2 x Spacer: 10mm |
| 2 x Screw: M5 x 55mm | 1 x Spacer: 16mm |
| 1 x Screw: M5 x 60mm | 5 x Small Washer |
| 5 x Finish/Countersunk Washer | 5 x Nut |


P-Clamp Positioning

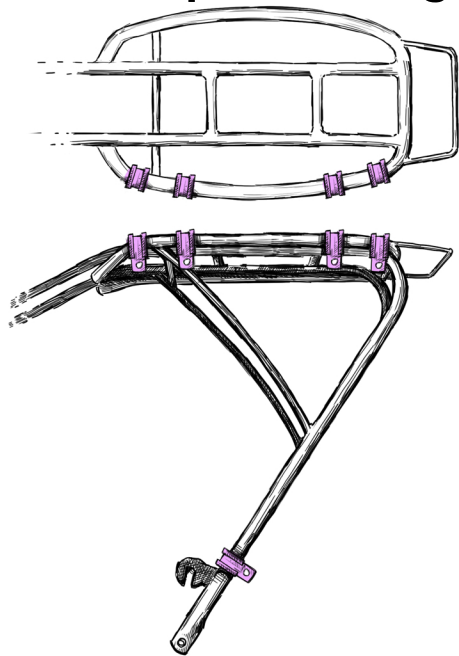


Tow Monster Screw Positioning

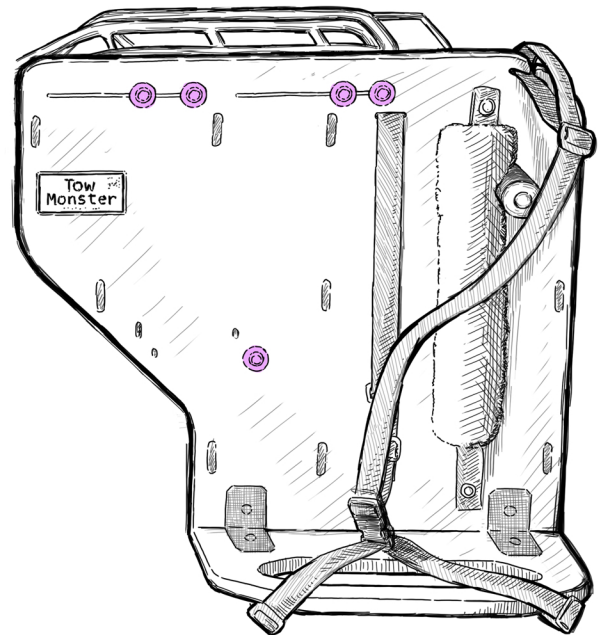

Top Screws Sequence*

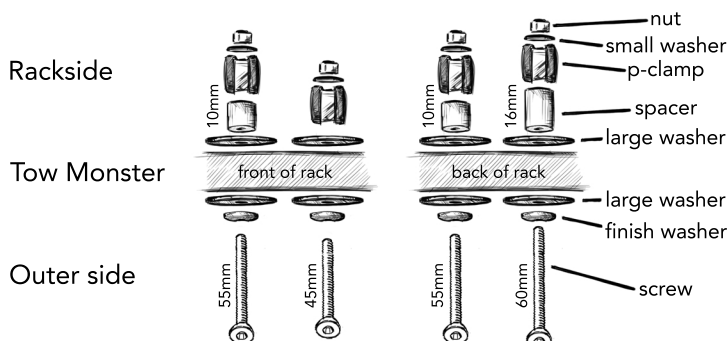

Bottom Screw Sequence

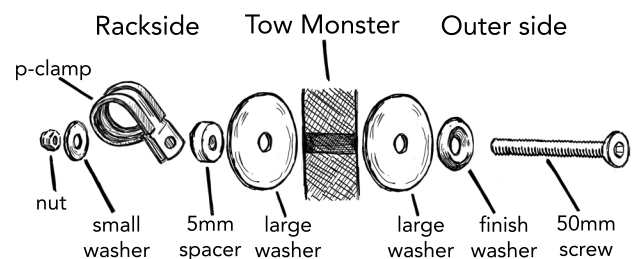

*left side Tow Monster illustrated; mirror the direction of screws & hardware for a right side Tow Monster